

VANDAL RESISTANT BACK-LIT WEATHERPROOF ACCESS CONTROL KEYPAD

CE



**K301
User Manual (MK-II)**

**FOR ELECTRIC LOCK, INTER-LOCK
AND SECURITY SYSTEM INSTALLATIONS**

TABLE OF CONTENTS

INTRODUCTION & FEATURES	5
SPECIFICATIONS	6
INSTALLATION	7
Precautions	7
CONNECTION TERMINALS	8-10
OTHER FACILITIES	11
On-Board LED Indicators	11
Pacifier Tone & The LED Signals	11
Jumper for Back-Lit Selection	11
PREPARATION FOR PROGRAMMING	12
A) Criteria for Codes and Cards	12
B) Security Level of The Operation Media	12
PROGRAMMING AND OPERATION	13-42
Power Up The Keypad	13
Set Keypad into Programming Mode with Master Code	13
Direct Access to Programming Mode with The "DAP" Code – 2 8 2 8	14
System Refreshing with "Refreshing Code" --- 9 9 9 9	14
The Default Values after Refreshing	15
Master Code	16
Super User Code	16
Operation and Functions of The Super User Code	17-18
User Codes For Output 1 & 2	19
Examples – Programming And Operation	19-23
Visitor Codes (For Output 1 Only)	24-25
Duress Codes (For Outputs 1 & 2)	26-28
Operation And Function of The Duress Code	28
Output Modes & Timing for Output 1 and 2	29
System Real-Time-Clock	30
Start & Stop Times For Daily Inhibition of Output 1	31-32
Personal Safety And System Lock-Out	33
User Code Entry Mode - Auto or Manual	34
Pacifier Tones On-Off Selection	34
Output Operation Announcer	35
Status LED Flashing On-Off during Standby	35
Door Forced Open Warning & Timing	36
Door Propped-Up Warning & The Delay Time	36
Intelligent Egress Button – An Unique Feature of A Contemporary Keypad	37
Where And Why "Going Out" Needs Attention	37-38
Egress Delay , Warning And Alarm	39-40

TABLE OF CONTENTS

Operation Modes	41
Close The Programming Mode	41
Programming - General Users	42-43
Programming Summary Chart	44-45
Application Examples	46-49
Stand alone Door Lock	46
Inter Lock System Using Two Keypads	47

INTRODUCTION

K301 is a self-contained two output relay, vandal resistant and weatherproof keypad. It has been designed for full feature stand alone access control applications providing PIN and/or card access

The keypad is ideally for door strike and alarm arm-disarm controls. It is also a programmable industrial timer (from 1 second to over 24 hours) for automatic operator system.

K301 (Standard Version):

Output Relay 1 – 5A Rating N.C. & N.O. Contacts for Door Lock Actuation Control

Output Relay 2 – 1A Rating N.C. & N.O. Contacts for Auxiliary Device Control

FEATURES

- A member of the Tri-Tech series keypads compatible with the optional controllers & reader keypads for system expansion
- Loaded with the K301 MK-II operation software
- Built-in with all the logics for stand alone, split-decoded and multi-station operations
- Controls "Going in" with User Codes and "Going out" with feature programmable egress button
- Independent control for the two output relays with programming timer
- Total 1,100 User Codes for controlling of the two outputs
- Indoor or outdoor installation with IP-66 all weather ingress protection
- Stainless steel faceplate combines with die-casting metal back-lit key buttons
- Vandal resistant die-casting metal housing for surface or gooseneck mounting

Package Contents

- One K301 Keypad
- One Pack of Mounting Screws
- One Centre Pin Torx Screw Wrench
- One User Manual



SPECIFICATIONS

- **Operating Voltage:**
12V-24V AC/DC, Auto adjusting
- **Operating Current:**
62mA (quiescent) to 130mA@12VDC
30mA (quiescent) to 61mA@24VDC
- **Storage and Operation Temperature:**
-20 C to +70 C
- **Storage and Operation Humidity:**
5-95% relative humidity non-condensing
- **Working Environment & Ingress Protection:**
All weather, IP-66
- **Number of Users:**
Output 1 – 1,000 (User Codes/Cards) + 50 Duress Codes
Output 2 – 100 (User Codes/Cards) + 10 Duress Codes
- **Number of Visitor Codes:**
50, programmable for one time or with time limit
- **Timings for Code Entry:**
10 seconds waiting for next digit entry, 30 seconds waiting for code entry after card reading
- **The Timers:**
1-99,999 Seconds (Over 24 Hours possible) Independent Programmable Timers for O/P 1 & 2
- **Egress Button:**
Programmable for Instant, Delay with Warning
Momentary or Holding Contact for Exit Delay
- **Input Sensing Terminals:**
a) Door position, **b)** Egress, **c)** O/P 1 inhibit
- **Output Control Terminals:**
Transistor Open Collector 24VDC/100mA sink Max for the following outputs
a) Duress, **b)** Key Active, **c)** Inter-lock
- **Output Contact Ratings:**
Output Relay 1 – N.C. & N.O. dry contacts, 5A/24VDC Max.
Output Relay 2 – N.C. & N.O. dry contacts, 1A/24VDC Max.
Tamper Switch – N.C. dry contact, 50mA/24VDC Max.
- **Dimensions:**
125(H) X 79(W) X 46/54(D)mm
- **Weight:**
520g net
- **Housing:**
Die-Cast Aluminum, Powder-paint coating
- **Faceplate Material:**
1.5mm stainless steel

Specifications are subject to change for modification without notice

INSTALLATION

ASSEMBLY

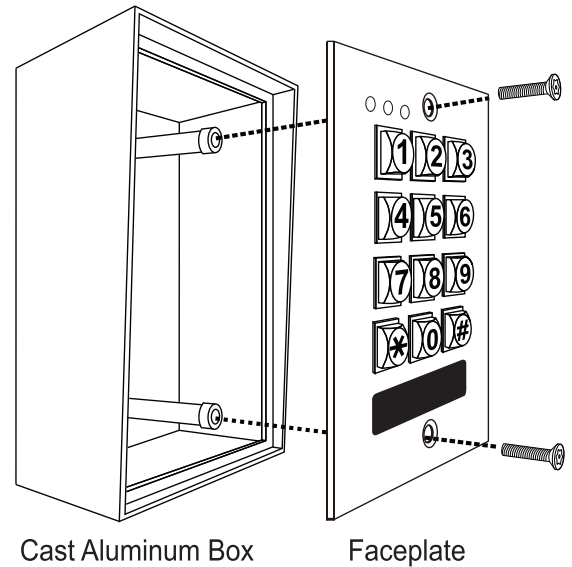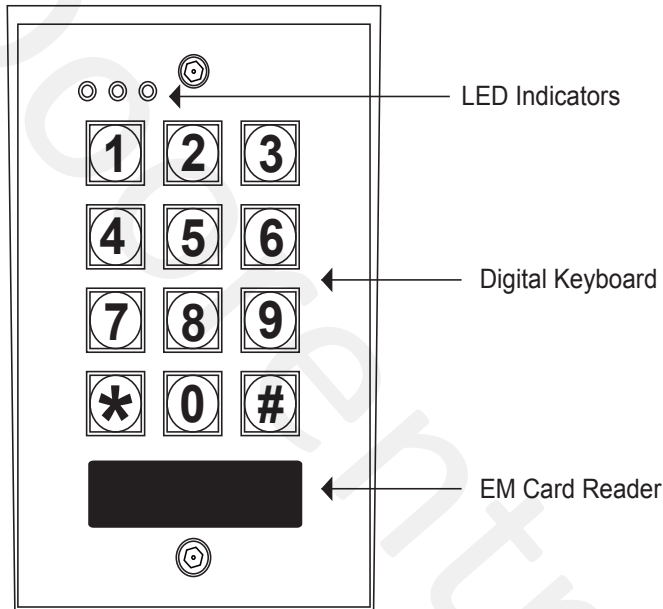

PRECAUTIONS

1) Prevent Interference:

The EM Card reader is working at the frequency of 125Khz. Installation precautions are necessary.


- i) Make sure the location for installation has no strong low frequency electro-magnetic wave. Especially in the range of 100-200Khz
- ii) If there is more than one keypads with the same operation frequency installed closely in the location, make sure that they are at least 60cm (2ft) apart from each other to prevention interference.

2) Prevent Accidental Short Circuit:

In previous experience, most of the damages caused in the installation are accidental touching of the components on circuit board with the wires carrying power. Please be patient to study the manual to become familiar with the specifications of the system before starting the installations.

- i) Do not apply power to the system while it is in installation.
- ii) Check carefully all the wirings are correct before applying power to the system for testing.

CONNECTION TERMINALS

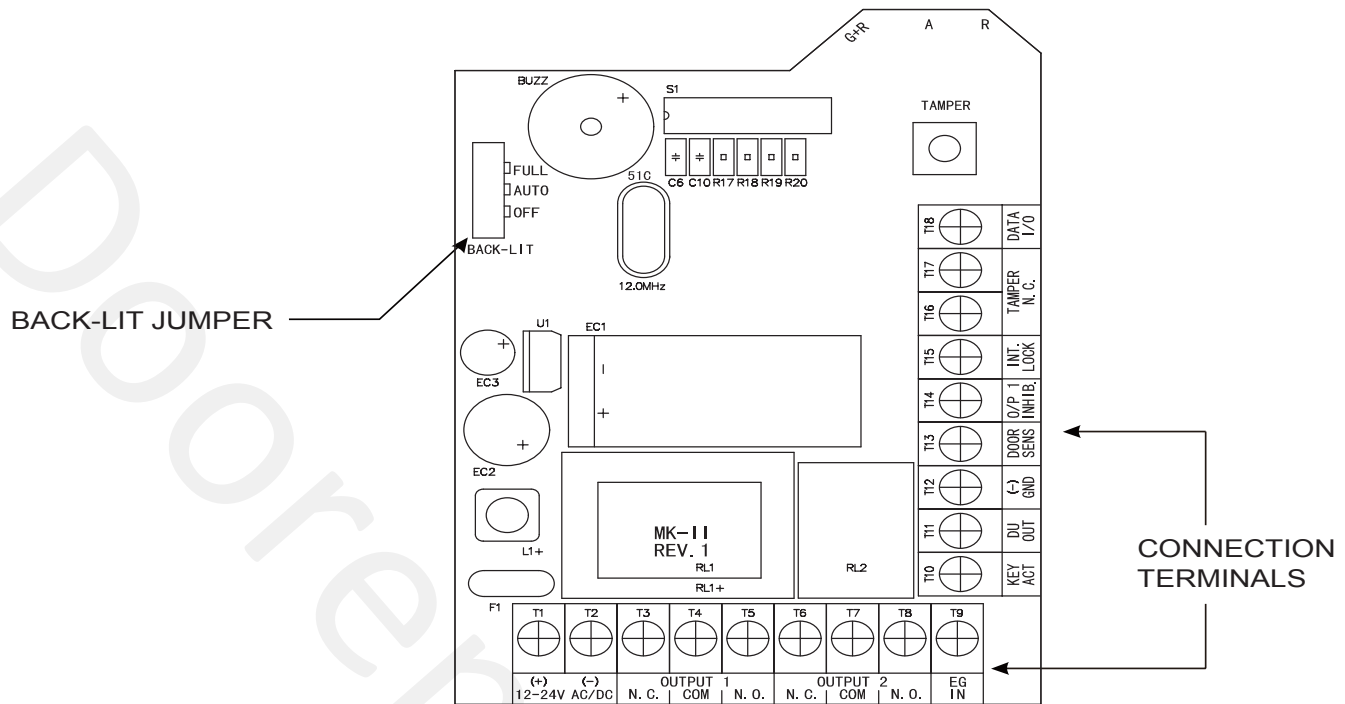

1 - 2 : 12 - 24V AC/DC (Power Input Terminal)

Connect to 12-24V AC or DC power supply. The (-) supply and (-) GND (terminals 2 & 12) are the common grounding points of the keypad system. No selection jumper is required for the full input voltage range. Connect DC power with the (+) and (-) polarity indicated; and there is no polarity discrimination for AC power input.

3 - 4 - 5 : OUTPUT 1 (Output Relay 1)

5 Amp relay dry contact controlled by the Group 1 User Codes, recommended for door strike. Terminal 3 is Normally Closed (N.C.), terminal 5 is Normally Open (N.O.) and terminal 4 is the common point of the two contacts. Use N.C. output for Fail-safe locking device; and N.O. output for Fail-secure locking device. The relay is programmable for Start/Stop (toggle) mode or Momentary timing mode. See programming Location 51 for the details.

6 - 7 - 8: OUTPUT 2 (Output Relay 2)

1 Amp relay dry contact with N.C. and N.O. outputs. Terminal 6 is the N.C.(Normally Closed). terminal 8 is N.O. (Normally Open) and terminal 7 is the common point of the two contacts, which is prepared for actuating auxiliary device controlled by the keypad; or external door chime actuation controlled by the bell button. The maximum rating of the relay contacts is 24 VDC/1A.

K301 - Standard Version

The Output relay 2 in K301 is controlled by the Group 2 User Codes. It is programmable for Start/Stop (toggle) mode or Momentary Timer mode. See programming Location 52 for the details.

9: EG IN (Egress Input)

A Normally Open (N.O.) input terminal referring to (-) ground. With the help of connecting a normally open button to activate Output 1 for door opening like using Codes/cards.

Egress button is usually put inside the house near the door. More than one egress buttons can be connected in parallel to this terminal. Leave this terminal open if not used.

See Programming Locations 90 for more information about the Egress Button with programmable features.

10: KEY ACT O/P (Keypad Active Output)

An NPN transistor open collector output with maximum power rating of 24VDC/100mA sink. It is equivalent to an N.O. (Normally Open) terminal referring to ground. It can be used to drive small power device, such as a relay or a low power control point for other equipment.

11: DU OUT (Duress Output)

An NPN transistor open collector output with maximum power rating of 24VDC/100mA sink. It is equivalent to an N.O. (Normally Open) terminal switching to (-) ground after the Duress Code is entered. Use it to trigger an alarm zone of a security system, or turn on a buzzer to notify a guard.

12: (-) GND (Common Ground)

A grounding point of the keypad that is common to terminal 2.

13: DOOR SENS N.C. (Door Position Sensing Input -- Normally Close)

A Normally Closed (N.C.) sensing point referring to (-) ground, with the help of a normally closed magnetic contact monitors the open or close status of the door. It initiates the following functions for the system. Connect it with jumper to (-) Ground if not used.

a) Door Auto Re-lock

The system immediately re-locks the door after it is re-closed before the end of the programmed time for output 1. It prevents unwanted "tailgate" entry.

b) Door Forced Open Warning

The keypad generates "door forced open" warning instantly once the door is forced to open without a valid user Code or egress button. The warning lasts as long as the time programmed (1-999 sec). It can be stopped with an User Code for output 1 at anytime. See programming Location 80 for the details.

c) Door Propped-up Warning

The keypad generates propped-up warning beeps while the door is left open longer than the allowable time programmed. The warning will last as long as the door is open until re-closed. See programming Location 81 for the details.

d) Inter-lock Control

The inter-lock control output always goes to (-) while the door is open, which gives signal to disable the partner keypad in an inter-lock system. See the Inter-lock terminal 15 description for more information.

14: O/P 1 INHIBIT N.O. (Output 1 Inhibit Control Input – Normally Open)

A Normally Open (N.O.) sensing input point for controlling the Output 1, with this terminal connecting to (-) ground, the **Egress Button, the group of User PINs for Output 1 are all disabled**. It is prepared mainly for the cross wire connection with the "Inter-lock O/P" point of the partner keypad in an Inter-lock system.

NOTE: The inhibit function does not govern the Duress Codes and the Super User Codes. They are always valid

15: INTER-LOCK O/P (Inter-lock Control Output)

An NPN transistor open collector output with maximum power rating of 24VDC/100mA sink. It is OFF at normal condition and it switches to (-) ground immediately for the first 5 seconds after keying in a valid User Code to operate Output 1, then, it will keep tying to (-) ground during the Door Position Sensor is open circuit due to door opening. Use this output point to make cross wire connection with the partner keypad's "O/P 1 Inhibit" point in an Inter-lock system to prevent both doors can be opened at the same time.

An Inter-lock System:

An inter-lock system is a two-door system that always allows only one of the doors to open during the operation. While one of the doors is opened, the other door keeps close until the open door is re-closed. It prevents the unauthorized people dashing into a protected area while the doors are in use.

An inter-lock system needs two keypads and two door position sensing switches for the two doors.

16 - 17: TAMPER N.C. (Tamper Switch Normally Closed Contact)

A normally closed dry contact while the keypad is secured on its box. It is open while keypad is separated from the box. Connect this N.C. terminal to the 24 hour protection zone of an alarm system if necessary.

18: DATA I/O PORT (Data Communication Bus)

Data I/O port is prepared for setting up a data bus for the connection of the auxiliary reader-keypads and the split-decoder in system expansion. See the examples in "Application Expansions" section for the details.

OTHER FACILITIES

ON-BOARD LED INDICATORS

RED / GREEN (Right) ---	It lights up in Green for Output 1 activation; Red for Output 1 inhibited and flashing during inhibition paused.
AMBER (Centre) -----	It flashes in Standby. It shows the system status in synchronization with the beep tones. The standby flashing can be OFF with programming. See Location 73 for the details.
RED (Left) -----	It lights up in Red for output 2 activation.

PACIFIER TONES & THE LED SIGNALS

The buzzer and the amber LED indicator give following tones and signals respectively for system status:


STATUS	TONES *	AMBER LED
1) In Programming Mode	-----	ON
2) Successful Key Entry	1 Beep	1 Flash
3) Successful Code/Card Entry	2 Beeps	2 Flashes
4) Unsuccessful Code/Card Entry	5 Beeps	5 Flashes
5) Power Up Delay	Continuous Beeps	Continuous Flashes
6) Output Relay Activation **	1 Second Long Beep	-----
7) In Standby ***	-----	1 Flash in 1 Second Interval
8) System Refreshing	-----	Fast Flashes for 2.5 Minutes
9) Code/Card Already Stored in System	1 Long Beep	-----
10) Keypad link-up with Decoder Failed	Continuous 1 Beep/5 secs	-----
11) Real -time-clock stopped after power failure	Continuous 3 Fast Beeps /5 secs	-----

NOTE:

- * All Pacifier Tones can be ON or OFF through the programming option at Location 71
- ** The Output Relay Activation beep can be selected through the programming option at Location 72
- *** The Standby flashing can be ON or OFF through the programming option at Location 73

JUMPER FOR BACK-LIT SELECTION

- 1) Full Back-lit --- The keypad gives dim backlit in standby. It turns to full backlit when a key button is pressed, then back to dim backlit 10 seconds after the last key button is pressed.
- 2) Auto Back-lit --- The backlit is OFF in standby. It turns to full backlit when a key button is pressed, then back to OFF 10 seconds after the last key button is pressed.
- 3) OFF --- Back-lit function disabled.

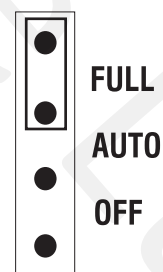

**BACK-LIT
JUMPER**

PREPARATION FOR PROGRAMMING

A) CRITERIA FOR CODES AND CARDS

1) Prime Codes

The prime codes include the a) User Codes, b) Master Code, c) Duress Codes, d) Super User Codes, e) Common User Codes and f) Visitor Codes. All these codes MUST be unique. It is not allowed to repeat a prime code for second function.

All the codes in this system can be 4-8 digits for Manual Entry Mode. The codes must be in the same digit length with the Master Codes for Auto Entry Mode. See Location 70 for the details.

2) Prime Cards

All the User Cards are prime cards. They are not allowed to program for second function. e.g. a card was programmed for operating output 1 is not allowed for output 2.

The cards used in this system are 125Khz proximity EM cards.

3) Secondary User Codes

A Secondary User Code is prepared to enhance the security of an user card, which is a code put after a card. The keypad requires both card and code are correct to grant an entry. The secondary code can be repeatedly used for a group of cards; or proprietary with one code for one card.

NOTE:

The keypad will reject repeated use of prime card or prime code in programming and give one long beep indication.

B) SECURITY LEVEL OF THE OPERATION MEDIA

The keypad provides 5 operation Media for owner's selection of security level. See programming Location 10, 20 & 30

1) EM Card Only – Operation Media 1

A general way for access control, just simply read a card to open the door. Security level is moderate but it is user convenient.

2) User Code Only – Operation Media 2

A general way for access control, just simply enter a code to open the door. Security level is moderate but it is user convenient.

3) EM Card + Common User Code – Operation Media 4

The keypad requires both Card and Common User Code are correct to grant an entry. Common User Code is an user code for all the cards. Two media are used in door control. The security level is better than just card or user code alone.

This operation mode can also report Duress Alarm by keying the duress code instead of common user code in emergency when the user is forced to open the door.

4) EM Card + Group Secondary User Code – Operation Media 3

A secondary user code can be repeatedly used for a group of cards in a department. Owner can make a proprietary department code for each department in a company. Only the staff of the department holding a card and knowing the code is accepted to enter. This approach increases the departmental security and prevents a lost card picked up by other group of people in the company to open the door.

This operation mode can also report Duress Alarm by keying the duress code instead of common user code in emergency when the user is forced to open the door.

5) EM Card + Proprietary Secondary User Code – Operation Media 3

The keypad accepts programming with each card having its own proprietary user code to work. It prevents any other people can use the lost card to open the door. Card with proprietary user code approach is ideal for the area that high security is the main concern.

This operation mode can also report Duress Alarm by keying in the duress code instead of Secondary user code in emergency when the user is forced to open the door.

PROGRAMMING & OPERATION

POWER-UP THE KEYPAD

The keypad gives power-up delay of 1 minute after power has been applied. It is the time frame designed for setting the keypad to programming mode with DAP code. See the details of “**DAP CODE – 2 8 2 8**” below.

- 1) The keypad gives continuous beeps for 1 minute after power-up.
- 2) The power-up delay can be stopped instantly with **12#** if the delay beep is found annoying and setting the keypad to programming mode with DAP code is not required.

POWER-UP DELAY STOP

1 2



VALIDATION

#

- 3) The keypad will set itself to Normal Operation Mode automatically after the 1 minute power-up delay expired or it is stopped with **12#**.

SET KEYPAD IN PROGRAMMING MODE WITH MASTER CODE

It is always necessary to set the keypad in programming mode for feature programming

The keypad is in normal operation after power-up delay. Set it in programming mode with Master Code and validate it with  

MASTER CODE



VALIDATION

NOTE:

- a) For the owner's convenience in programming at the first time, a Master Code 0 0 0 0 has been put into the keypad before exit-factory. It is **NOT** a default code. For security reason, owner should program a personal Master Code to replace it after the keypad is owned.
- b) The Mains LED (amber) is ON after the keypad confirms it in programming mode with 2 beeps.
- d) **DO NOT** turn off power while the keypad is in programming mode. Otherwise, it may cause error to the data in memory.

DIRECT ACCESS TO PROGRAMMING MODE WITH “DAP” CODE -- 2 8 2 8

In case the Master Code is forgotten, apply the following procedures precisely to set keypad into programming mode with DAP code:

- 1) Switch OFF all the power for 1 minute to ensure that the keypad is fully discharged.
- 2) Switch ON power again. The keypad is in Power-up Mode for 1 minute. The buzzer gives continuous beeps and the Status LED is flashing. This is the only time frame to accept the DAP code.
- 3) Press the Egress Button (the button connecting accross EG IN, (Terminal 9) and (-)GND, (Terminal 15) once to enable the keypad for accepting DAP code. The power-up beep stops after the Egress Button is pressed.
- 4) Key in the DAP code **2 8 2 8** and validate it with ***** ***** (or **🔔** **🔔**). The Status LED is ON and the keypad is in programming mode like using Master Code. It is ready to accept new programming data as long as you like until exit programming mode.

EGRESS BUTTON

PRESS ONCE



DAP CODE

2 8 2 8



VALIDATION

***** *****

- 5) To program a new Master Code to replace the old one. See “**Record A Master Code**” stated at “Location 01” for the details.

NOTE:

The keypad will set itself to normal operation mode 1 minute after power-up if the Egress Button is not pressed and the DAP code is not keyed in. To set keypad back to power-up mode, repeat procedures 1-4.

SYSTEM REFRESHING WITH “REFRESHING CODE” --- 9 9 9 9

The keypad can be refreshed by cleaning all the programmed old data and set it back to default values except the **Master Code**.

REFRESHING CODE

9 9 9 9



VALIDATION

#

NOTE:

- a) Make sure that system refreshing is really required before entering the refreshing code.
- b) Refreshing takes few minutes. The status LED (amber) keeps flashing during refreshing.
- c) The keypad is back to its default value after refreshing. Re-program of the desired values are necessary.

THE DEFAULT VALUES AFTER REFRESHING

LOCATION	PARAMETERS	DEFAULT FUNCTIONS & VALUES
0 1	Master Code	0 0 0 0 Factory Set, Not a default value *
0 2	Super User Codes	Nil ----- User Program Required
0 3	Common User Code 1	Nil ----- User Program Required
0 4	Common User Code 2	Nil ----- User Program Required
1 0	User Codes & Cards for O/P 1	Nil ----- User Program Required
2 0	User Codes & Cards for O/P 2	Nil ----- User Program Required
4 0	Visitor Codes	Nil ----- User Program Required
4 1	Duress Code for O/P 1	Nil ----- User Program Required
4 2	Duress Code for O/P 2	Nil ----- User Program Required
5 1	O/P Mode of The O/P 1	Time = 5 Sec, Momentary
5 2	O/P Mode of The O/P 2	Time = 5 Sec, Momentary
5 5	System Real-Time-Clock	Nil ----- User Program Required
5 6	Start & Stop Time	Nil ----- User Program Required
6 0	Personal Safety & Lock-out	Code = 1, 10 False Code/Card Lock-out 60 Sec
7 0	User Code Entry Mode	Code = 2, Manual Entry Mode
7 1	Pacifier Tones ON-OFF Selection	Code = 1, Pacifier Tone ON
7 2	O/P Operation Announcer	Code = 1 Sec, Notification Beep ON
7 3	Status LED Standby Flashing ON-OFF	Code = 1, Flashing Enabled
8 0	Door Forced Open Warning & Timing	Code = 0, Warning Disabled
8 1	Door Propped-up Warning & Delay	Code = 0, Warning Disabled
9 0	Egress Delay & Warning	Code 1 = 0, Instant, No Delay
		Code 2 = 1, Momentary Contact without Warning
9 4	Operation Modes	Code = 0, Keypad Mode

NOTE:

The DAP Code 2 8 2 8 and the Refreshing Code 9 9 9 9 are fixed in the operating system program. It can not be changed in any ways.

LOCATION
01

(1)


MASTER CODE
4 to 8 Digits

(2)


VALIDATION
#

(3)

(1) LOCATION

- Key in Location **01**

(2) MASTER CODE

- Master Code is the authorization code for setting the system to programming mode. It is **NOT** an User Code operating the output relays.
- The Master Code can be 4 to 8 digits.
- When a new master code is keyed in and confirmed, the old master code is replaced.
- The master code is also the **Link-up Code** between the keypad and the optional decoder in Split-decoded operation.

(3) VALIDATION

- Press **#** key once. Two-beeps confirms the entry.

Example:

Set a Master Code "2 2 3 3" ---- **0 1** **2 2 3 3** **#**
SUPER USER CODE
(Location 02)

The Super User Code has TWO functions. It is prepared to operate the three outputs and make operation of inhibit enable / disable to those outputs.

LOCATION
02

(1)


SUPER USER CODE
4 to 8 Digits

(2)


VALIDATION
#

(3)

(1) LOCATION

- Key in Location **02**

(2) SUPER USER CODE

- The Super User Code can be 4 to 8 digits.
- When a new Super User Code is keyed in and confirmed, the old one is replaced.

(3) VALIDATION

- Pressing **#** key to confirm code entry.

Example:

a) Set a Super User Code "2 5 8 0" ---- **0 2** **2 5 8 0** **#**

b) Deleted a Super User Code from memory: Key in the Location number and #. ---- **0 2** **#**

OPERATION AND FUNCTIONS OF THE SUPER USER CODE

1) Operate Output 1 and 2

The operation of the Super User Code is just like a normal User Code. Simply key-in the Code with a specific output number for the desired Output. The Super User Code can also be used to reset an operating output timer instantly.

SUPER USER CODE # 1 ----- Output 1 Activates or Resets

SUPER USER CODE # 2 ----- Output 2 Activates or Resets

Optional Functions Controlled by Super User Code for Output 1

Apart from controlling of the two outputs 1 and 2; the Super User Code can also be used to enable the optional functions controlling Output 1 for user convenience or security enhancement.

Super User Code and Egress Button are excluded from any system inhibition and lockup functions; they are valid for door open at anytime for safety.

2) Override The Door Lock Controlled by Output 1 (Keep Door Un-locked)

The Output 1 is usually for door lock control. In some situations, the door may require un-locked for a period of time to allow door opening without User Code for entry / exit convenience. This function Starts / Stops in toggle with the following code entry.

SUPER USER CODE # 7 ----- The Door is Un-locked, Start / Stop in Toggle

NOTE :

The door is un-locked while the function is enabled. The "Output 1" LED (Green) turns ON.

Do not forget to stop this function after use because the door is un-locked. Also, the system refuses the optional functions (3) & (4) while Override function comes into effect.

This feature is good for all the "Fail-safe electric locks".

"Fail-secure electric lock" requires power to keep in un-locked condition. It takes high current all the time while the function comes into effect and may cause damage to it. This function is not recommended for Fail-secure electric lock.

3) Pause The Scheduled Daily Inhibition for Output 1 (Temporarily Disable The Inhibition)

The scheduled inhibition can be programmed and applied to Output 1 with daily start and stop times. It can be stopped temporarily if required; such as the staff work overtime after office hours going into the inhibition period. This function Starts / Stops in toggle with the following code entry. It can be done before or during the inhibition period.

SUPER USER CODE # 8 ----- Door Lock Operation Resumes, Start / Stop in Toggle

NOTE :

- The "INHIBIT" LED (Red) is ON in inhibition and turns to Flashing while pause is into effect.
- See Programming Locations 55 & 56 for more information Daily Inhibition.

4) Inhibit All The User Codes for Output 1 (Disable Access Control Manually)

To enhance the security of the access control keypad, the owner can stop the keypad after office hour or while the house is nobody inside. Once the Output 1 (for door lock control) is inhibited, all the User Codes for it become invalid and those people holding the User Code are refused. This function Starts / Stops in toggle with the following code entry.

SUPER USER CODE




----- Door Lock Operation Inhibited, Start / Stop in Toggle

NOTE :

- The door is locked during Output 1 inhibited and the "INHIBIT" LED (Red) is ON.
- Inhibition applies to all User Codes for Output 1 only. Output 2 is not affected.

The Common User Codes 1 and 2 are prepared for operating of the Output 1 and 2 respectively as an enhance code. The Common User Codes **MUST** work in the form of "Card + Common Code" to operate the outputs to increase the security of the access control system. See Media 4 at Locations 10 & 20 for more information.

NOTE: Common User Code alone can **NOT** operate the Outputs directly.

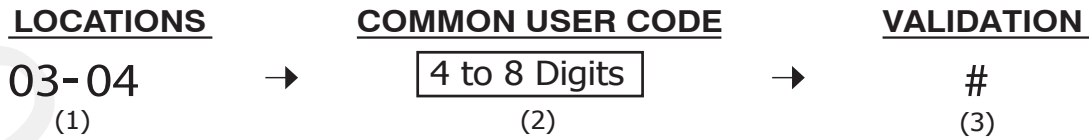

(1) LOCATIONS

- 03 -- Location Stores The Common User Code for Output 1
- 04 -- Location Stores The Common User Code for Output 2

(2) COMMON USER CODES

- The Common User Code can be 4 to 8 digits.
- When a new Common User Code is keyed in and confirmed, the old one is replaced.


(3) VALIDATION

- Pressing # key to confirm code entry.

Example:

a) Set a Common User Code "1 3 5 7" for Output 1 ---- 03 1357 #

b) Deleted a Common User Code from memory: Key in the Location number and #. ---- 03 #

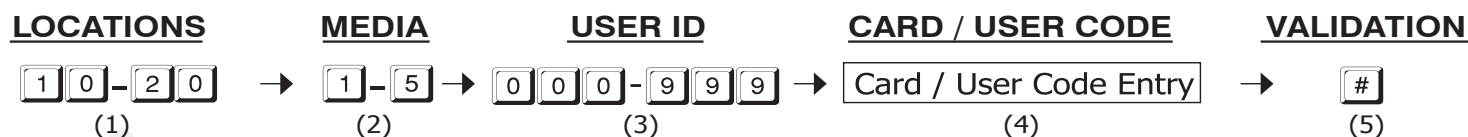

(1) LOCATIONS (User Groups)

10 – Group 1 – 1,000 User Codes / Cards for controlling Output 1

20 – Group 2 – 100 User Codes / Cards for controlling Output 2

(2) MEDIA (Operation Media)- please also see page 12 for more information of their security level

1 – Cards Only – 125Khz Proximity EM Card

2 – User Codes Only – 4-8 Digits

3 – Cards + Secondary User Code(s) – **See Note (a)**

4 – Cards + Common User Code – **See Note (b)**

5 – Delete Cards / User Codes from the selected User ID – **See Note (c)**

0999 – Group Clearing. Clear all the User Codes & Cards of the selected User Group Location. Clearing takes few seconds to a minute.

(3) USER ID (The IDs of The User Codes and Cards)

000 – 999 – 1,000 User IDs for the User Codes & Cards in User Group 1 (Output 1)

001 – 100 – 100 User IDs for the User Codes & Cards in User Group 2 (Output 2)

(4) CARD / USER CODE

Read EM Card or **key in User Code** into each assigned User ID.

(5) VALIDATION

Press the

#

 key once. Two-beep confirms the entry.


NOTE:

- (a) The Secondary User Code is a user code putting after a card in programming. It can be a proprietary user code for each user card or a code repeatedly used for a group of user cards as group user code (e.g. for a group of staff working in the same department).
- (b) The Common User Codes for the Output 1 & 2 have been programmed first at Locations 03 & 04 respectively. It is not necessary to key in the code again in programming here and it will follow the card automatically after the card is read.
- (c) Deletion of an User Code or Card (if the card was lost) can be done by keying-in its ID number. For deleting an existing cards, simply read the card once and confirm. It does not require the ID number. The Card includes the combinations of (1) Card Only, (2) Card + Secondary User Code and (3) Card + Common User Code.

EXAMPLES – PROGRAMMING AND OPERATION


1) Example 1 -- EM Card Only :

i) Programming :



- (a) The card is programmed for operating Output 1
- (b) The operation is medium EM Card only
- (c) Take ID number 001 in Group 1 to store the card, which is one of the IDs in 000-999
- (d) Put the card close to the reader, one beep confirms the reading
- (e) Press # to store the "Card", two-beep confirms a valid entry


ii) Operation : (while the system is back to operation mode)



- (a) Read the EM card. Two-beep confirms the card is read and Output 1 activates

2) Example 2 -- Private User Code Only :

i) Programming :



- (a) The Private User Code is programmed for operating Output 2
- (b) The operation medium is Private User Code only
- (c) Take ID number 001 in Group 2 to store the Private User Code, which is one of the IDs in 001-100
- (d) Put Private User Code "1 2 3 4" into the storage location
- (e) Press # to store the "Private User Code", two-beep confirms a valid entry


ii) Operation : (while the system is back to operation mode)



- (a) Key in the Private User Code "1 2 3 4"
- (b) Confirm it with the # key. Output 2 activates

3) Example 3 -- EM Card + Secondary User Code :

i) Programming :



- (a) The card is programmed for operating Output 1
- (b) The operation medium is EM Card + Secondary User Code
- (c) Take the ID number 002 in Group 1 to store the Card & Code, which is one of the IDs in 000-999
- (d) Put the card close to the reader. One beep confirms the reading
- (e) Put Secondary User Code "2 4 6 8 0" after reading of card
- (f) Press # to store the "Card + Secondary User Code", two-beep confirms a valid entry


ii) Operation : (while the system is back to operation mode)



- (a) Read the EM card. Two-beep confirms the reading and 30 seconds waiting time is given for entry of the User Code, the Amber LED keeps flashing
- (b) Key in the Secondary User Code "2 4 6 8 0"
- (c) Confirm it with the # key. Output 1 activates

4) Example 4 -- EM Card + Common User Code:

i) Programming :



- (a) The card is programmed for operating Output 1
- (b) The operation medium is "EM Card + Common User Code"
- (c) Take ID number 003 in Group 1 to store the card, which is one of the IDs in 000-999
- (d) Read the EM card. One beep confirms the reading. (No need to key in a Common User Code but there MUST be a Common User Code already recorded in Location 03; (or 04 for O/P 2).
- (e) Press # to store the "Card". Two-beep confirms a valid entry

ii) Operation : (while the system is back to operation mode)



- (a) Read the EM card. Two-beep confirms the reading and 30 seconds waiting time is given for entry of the Common User Code, the Amber LED keeps flashing
- (b) Key in the Common User Code "1 3 5 7" (the number programmed in "Location 0 3" for Output 1 in the previous Example)
- (c) Confirm it with the # key. Output 1 activates

5) Example 5 -- Delete An User Code & / or EM Card (for O/P 1 or 2) :

i) Delete An User Code or A Lost EM Card

(a) (b) (c) (d)

- (a) Key in the User Group that the User ID belongs to. "10" for Group 1, "20" for Group 2
- (b) Key in "5" that is the Command Code for making a deletion
- (c) Key in the User ID that stored the User Code, the lost EM card or the EM Card+User Code
- (d) Press the # key. Two-beep confirms a valid entry and the Code and/or Card in that User ID is cleared

ii) Delete an EM Card

(a) (b) (c) (d)

- (a) Key in the User Group that the EM Card belongs to. "1 0" for Group 1, "2 0" for Group 2
- (b) Key in "5" that is the Command Code for making a deletion
- (c) Read the EM card. One-beep confirms the reading. Read the Card only also makes a valid deletion to the Card working with the Common User Code or the Secondary User Code
- (d) Press the # key. Two-beep confirms a valid entry. The EM Card in that User ID is cleared. Key in the User ID is not required.

6) Example 6 – Clear The Whole Group of Users :

Whole group of users including the Codes and Cards can be cleared with the following command.

(a) (b) (c)

- (a) The User Group 1 – "10" is selected to be cleared. "20" for Group 2
- (b) Key in the Group Deletion Command, 0 9 9 9
- (c) Confirm the deletion with #. All the User Codes and Cards in Group 1 are cleared. It takes few seconds to a minute to complete depending on the data stored.

7) Example 7 – Report A Duress While Using EM Card :

The Duress Codes are Prime User Codes in the system. In the "EM Card + Secondary User Code" or "EM Card + Common User Code" operation, they can be used to replace the "Secondary User Code" or the "Common User Code" to operate the specific output and report a duress alarm event. Programming is not required. The system has this function automatically while Duress Code exists.

Operation : (while the system is in the operation mode)

(a) (b) (c)

- (a) Read the EM card. Two-beep confirms the reading and 30 seconds waiting time is given for entry of the Duress Code, the Amber LED keeps flashing
- (b) Key in one of the Duress Codes for the specific output (the Code programmed in "Location 41 and 42 for Output 1 and 2 respectively)
- (c) Confirm it with the # key. The specific Output activates in a normal way and the Duress Output also activates to report Duress Event to an alarm system.

NOTE: The Duress Event can not be reported if the operation mode is EM Card alone. It is required to key in the Duress Code directly instead of EM card to report Duress Event.

The Visitor Codes are temporary user codes for Output 1 (mainly for door strike in access control). They can be programmed as “**One Time Codes**” or “**Codes with Time Limit**”. The Visitor Codes will be cleared automatically after use if they are one time codes, or, when the allowed time expires.

<u>LOCATION</u>		<u>VISITOR ID</u>		<u>VALID PERIOD</u>		<u>VISITOR CODE</u>		<u>VALIDATION</u>
40 (1)	→	01 - 50 (2)	→	00 or 01 - 99 (3)	→	4-8 DIGITS (4)	→	# (5)

(1) LOCATION

Key in Location 40

(2) VISITOR ID

- --- 50 Visitor IDs for the 50 visitor codes. They are Two-digit numbers

--- Clear all the Visitor Codes in Location 40. Please see the Programming example below for the details.

(3) VALID PERIOD

The codes in this box **MUST** be two digits and they represent the time of operation.

--- **One Time Code**

One Time Code has no time limit but it can only be used for ONCE. It is cleared after use.

- --- **Time Limit in Hour(s)**

The Visitor Code can be set with the valid time limit of 1 Hour to 99 Hours with a two-digit number of 01 to 99. The visitor code is cleared when the time limit reaches.

(4) VISITOR CODES

- The Visitor Codes can be 4-8 digits for Manual Mode code entry.
- The Visitor Codes MUST be in the same digit length with the Master Code for Auto Mode code entry.
- The Visitor Codes can not reset Duress Output.
- When a new Visitor Code is put in the same Code box, the old code is replaced.

NOTE: All Visitor Codes will be cleared after power down to prevent extension/confusion of their valid time limit.

(5) VALIDATION

Press key once. Two-beeps confirms the entry.

EXAMPLES:

Example 1: Set a "One Time Visitor Code" with the number of "1 2 6 8" for the Output 1

4	0	0	1	0	0	1	2	6	8	#
---	---	---	---	---	---	---	---	---	---	---

(a) (b) (c) (d) (e)

(a) Visitor Code Programming, (b) The Visitor ID, (c) An One Time Code, (d) The Visitor Code, (e) Entry Confirmation

Example 2: Set a "Visitor Code" with the number of "1 3 7 8" that is valid for three hours

4	0	0	2	0	3	1	3	7	8	#
---	---	---	---	---	---	---	---	---	---	---

(a) (b) (c) (d) (e)

(a) Visitor Code Programming, (b) The Visitor ID, (c) Valid for 3 Hours, (d) The Visitor Code, (e) Entry Confirmation

Example 3: Delete a "Visitor Code" from Visitor ID 02 in the memory

4	0	0	2	#
---	---	---	---	---

(a) (b) (c)

(a) Visitor Code Programming, (b) The Visitor ID, (c) Delete Confirmation

Example 4: Clear all "Visitor Codes" in Location 40

4	0	0	9	9	9	#
---	---	---	---	---	---	---

(a) (b) (c)

(a) Visitor Code Location, (b) The Deletion Command Code, (c) Confirmation, all Visitor Codes are cleared

Duress Codes are prepared for those **Important Persons** in case of **DURESS** while he is operating the access control keypad. The duress code operates like a normal User Code for Output 1 or 2, and at the same time activates the Duress Output without any indication. The user may use it to report an emergency and ask for help silently when he is forced to operate the keypad if the Duress Output is connected with a security system (for example, an Auto-dialer).

NOTE: The Duress Codes are always valid. They are not governed by any inhibit or lockup function in the system.



(1) LOCATIONS

41 – Duress Codes for Output 1

42 – Duress Codes for Output 2

(2) DURESS CODE IDs

01 - 50 50 Duress Code IDs for The Output 1

01 - 10 10 Duress Code IDs for The Output 2

0999 = Clear all the Duress Codes from the selected Location group.

Please see the programming example below for the details.

(3) THE DURESS CODES

50 and 10 Duress Codes can be programmed for Output 1 and 2 respectively. They are stored in their two-digit Code ID box. When a new Code is put into the same Code ID box, the old code is replaced.

- The Duress Codes are 4-8 digits for Manual Mode code entry.
- The Duress Codes MUST be in the same digit length with the Master Code for Auto Mode code entry.
- Always set a Duress Code that is easy to remember in Panic Situation. Only one number different from the daily used User Code is highly recommended.
- **Example:** User Code is 1 3 6 9, then 3 3 6 9 or 1 3 6 0 might be a good choice for the Duress Code.

(4) VALIDATION

Press # key once. Two-beeps confirms the entry.

EXAMPLES:

Example 1: Set a "Duress Code" with the number of "3 3 6 9" for Output 1

41 01 3369 #
(a) (b) (c) (d)

(a) Duress Code for Output 1, (b) Duress Code ID, (c) The Duress Code, (e) Entry Confirmation

Example 2: Set a "Duress Code" with the number of "2 3 9 8 0" for Output 2

42 01 23980 #
(a) (b) (c) (d)

(a) Duress Code for Output 2, (b) Duress Code ID, (c) The Duress Code, (e) Entry Confirmation

Example 3: Delete an Output 1 "Duress Code" from Duress Code ID 01 in the memory

41 01 #
(a) (b) (c)

(a) Duress Code for Output 1, (b) The Duress Code ID, (c) Delete Confirmation

Example 4: Clear The Whole Group of Duress Codes from Location 41 :

41 0999 #
(a) (b) (c)

(a) Group Location 41 , (b) The Group Deletion Command, (c) Confirmation, all Duress Codes in Location 41 are cleared.

OPERATION AND FUNCTION OF THE DURESS CODE

The Duress Code(s) has double actions when it is keyed in. It activates the Duress Output (for duress alarm) and at the same time activates the specific Relay Output 1, 2 or 3 just like a normal User Code. The Duress Code always activates the Relay Output in its group, but, does not de-activate (stop) the Duress Output. **ONLY a normal User Code in anyone of the user groups, or a Super User Code** can reset (de-activate) the Duress Output.

For Example:

Key in The Duress Code 3 3 6 9 of the Group 1 (for Output 1) To Command The Duress Function :

3369# ----- Duress Output activates (switches to (-) ground) & Output 1 activates.

Key in The Duress Code 3 3 6 9 in Group 1 (for Output 1) Again :

3369# ----- Duress Output keeps activating and no change in its state (keeps to (-) ground) & Output 1 activates again.


Key in A Normal User Code to Reset Duress (For Example: 1369 is An User Code for Output 1):


1369# ----- Duress Output resets (back to OFF state) but does not activate Output 1.

Report Duress in EM Card Operation

The Duress Codes are Prime User Codes in the system. In the "EM Card + Secondary User Code" or "EM Card + Common User Code" operation, they can be used to replace the "Secondary User Code" or the "Common User Code" to operate the specific output and report a duress alarm event. Programming is not required. The system has the function automatically while Duress Code exists.

Operation : Taking Duress Code 3 3 6 9 in Group 1 for Output 1 As Example

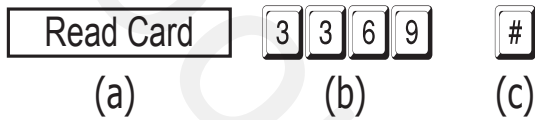

- Read the EM card. Two-beeps confirm the reading and 30 seconds waiting time is given for the entry of Duress Code, the Amber LED keeps flashing
- Key in the Duress Codes 3 3 6 9 for operating Output 1
- Confirm it with the  key. Output 1 activates in a normal way and the Duress Output also activates to report Duress Event to an alarm system if connected.

NOTE: Duress Event can not be reported with EM Card alone. User can only directly use Duress Code to open the door and report duress event in emergency

OUTPUT MODE & TIMING FOR OUTPUT 1 and 2

(Locations 51 & 52)

The two relay outputs are programmable for Start/Stop or Timing modes. Apart from door access control, alarm arm-disarm control, they are also **universal timers for automatic operators in industry** with their 99,999 seconds (over 24 hours) programmable timer.

<u>LOCATIONS</u>		<u>OUTPUT MODE & TIME</u>	<u>VALIDATION</u>
51	-52 (1)	→ 0 or 1 -99999 (2)	→ # (3)

(1) LOCATIONS

-- Location for Output 1

-- Location for Output 2

(2) OUTPUT MODE & TIMING

-Start /Stop Mode (Toggle)

The number 0 sets the output to **Start / Stop mode**. The output **Starts** when an User Code is entered; the output **Stops** when an User Code is entered again.

- -- Seconds Momentary --- (Default -- Momentary 5 Seconds)

The output can be set in **Momentary Mode** with the time of 1 second to 99,999 seconds. The output will reset automatically when the time expires.

(3) VALIDATION

Press key once. Two-beeps confirms the entry.

RESET OUTPUT TIMER WITH SUPER USER CODE

The Output Timer can be **RESET manually at anytime with the Super User Code** that operates the desired output before the end of the time.


Example:

Reset Output 1 Timer -- ----- Output 1 stops

Reset Output 2 Timer -- ----- Output 2 stops

This 24 hour real-time-clock provides the daily time base for starting and stopping the function of inhibition to relay output 1 (mainly for electric door lock strike).

No real-time-clock setting is required if daily start-stop inhibition at Location 56 is not enabled.

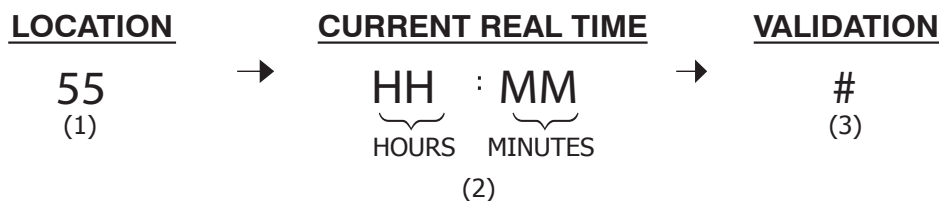

(1) LOCATION

Key in Location 55

(2) CURRENT REAL TIME

HH:MM – The current time in Hour and Minute. The allowed time figure is **00:00 – 23:59**

The time setting is based on 24 hours daily with the first two digits for hours and the last two digits for minutes. The time in second always starts at 0 0.

(3) VALIDATION

Press # key once.

Two-beep confirms the setting and the clock starts to count in 24 hour basis from the programmed current time.

Programming Examples:

a) Set the current time of "10:30" (AM) to the keypad ---- 55 1030 #

b) Set the current time of "6:45" (PM) to the keypad ----- 55 1845 #


IMPORTANT NOTE:

- 1) The real-time-clock stops after power failure, which makes the real-time inhibition loses its time base. **It is necessary to re-program the system's real-time-clock** unless the keypad is back up with UPS.
- 2) The keypad gives **warning beeps of 3 fast beeps / 5 seconds continuously after power failure** until the real-time-clock is re-programmed.
- 3) No "after power failure warning beep" will be given if **Location 56** is not programmed with Start/Stop times.
- 4) Suggest to program the clock every 3-6 months to keep time accuracy; or when time deviation is found.

Setting with start and stop times into the keypad, the real-time inhibition period for output 1 will recycle daily until the time settings are cleared.

This function works with the real-time-clock. Set up the real-time at Location 55 is necessary.

For safety reason, the Egress Button is designed always valid. The door lock (controlled by output 1) can be opened with it at anytime during inhibition.

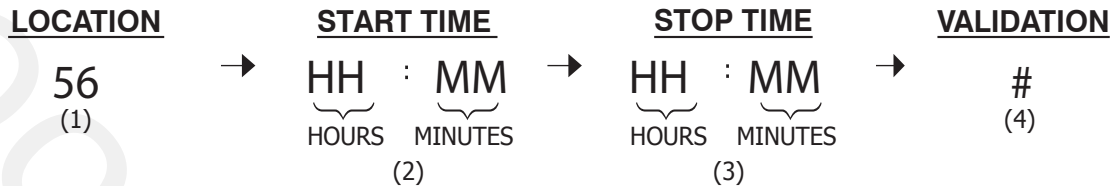

(1) LOCATION

Key in Location 56

(2) START TIME

HH MM – Set the real-time inhibition starting time in Hour and Minute. The allowed time figure is **00:00 – 23:59**

The starting time is based on 24 hours daily with the first two digits for hours and the last two digits for minutes. The time in second always starts at 0 0.

(3) STOP TIME

HH MM – Set the real-time inhibition stopping time in Hour and Minute. The allowed time figure is **00:00 – 23:59**

The stopping time is based on 24 hours daily with the first two digits for hours and the last two digits for minutes. The time in second always starts at 0 0.

(4) VALIDATION

Press # key once.

Two-beep confirms the setting.

Programming and Operation Examples:

(i) Set the starting and stopping time for the real-time inhibition period

a) Set Inhibition Period from 12:30 PM (today) – 1:30 PM (same day) for lunch time:

56 1230 1330 #

b) Set Inhibition Period from 6:30 PM (today) – 8:15 AM (next day) for office close:

56 1830 0815 #

NOTE:

- 1) The start and stop time figures are 24 hours basis. They are 4-digit figures from the smallest **00:00** to the largest **23:59**.
- 2) Entry of the two figure values from **Small (Start)** to **Large (Stop)** for the period of inhibition; the inhibition will start and stop in the same day. See **example (a)**.
- 3) Entry of the two figure values from **Large (Start)** to **Small (Stop)** for the period of inhibition; the inhibition will start at the time of the day; thus stop in the next day. See **example (b)**.
- 4) The keypad does not accept the "Start" and "Stop" times with same value. The two time figures must be different.

(ii) Clear the function of inhibition

Clear the time settings to stop the function of inhibition:

56 #

(iii) Pause the real-time inhibition manually

The real-time inhibition can be stopped temporarily if require; such as the staff work overtime in office. The inhibition can be paused manually with Super User Code before or during the inhibition period. The pause is toggle and does not affect the real time period counting.

<div>Super User Code</div>	# 8	---- Inhibition paused [Inhibit LED(Red) Flashing]
----------------------------	-----	----------------------------------------------------

<div>Super User Code</div>	# 8	---- Inhibition resumes [Inhibit LED(Red) ON]
----------------------------	-----	-----------------------------------------------


NOTE:

The "INHIBIT" LED(Red) is flashing during the paused period; and it is ON after inhibition resumes.

(iv) Open door lock with Super User Code at anytime

The Super User code is valid all the time even in the inhibition period. This function does not affect the real time period counting.

<div>Super User Code</div>	# 1	---- The door is open
----------------------------	-----	-----------------------

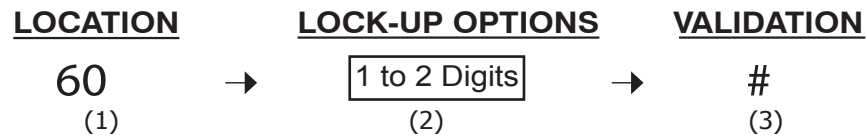**(1) LOCATION**

Key in Location 60

(2) LOCK-UP OPTIONS

The Options are represented by the following Numbers. They are described below:

- 1 --- After 10 successive false User Code trials, the keypad locks during 60 seconds.
-- (Default)
- 2 --- After 10 successive false User Code trials, activates the Duress output to switch to (-) ground. The Duress Output can be released with any user Code in the User Group 1 or Super User Code.
- 5 - 10 --- Selection of after 5 to 10 successive User Code trials, the keypad locks during 15 minutes. The keypad can be reset to release the lock-up with the "Super User Code" in the following way.

Example: Release the lock-up -- SUPER USER CODE # 9

00 --- Disappearance of all the above lock-up securities.

(3) VALIDATION

Press # key once . Two-beeps confirms the entry

	<u>LOCATION</u>		<u>ENTRY MODES</u>		<u>VALIDATION</u>
(1) LOCATION	70 (1)	→	1 or 2 (2)	→	# (3)
Key in Location	70				

(2) USER CODE ENTRY MODES

Two modes 1 and 2 are available for User Code entry options.

1 --- Auto Entry Mode


Auto Entry Mode requires no pressing of the # key after code entry for code checking.

In the Auto Entry Mode, the **User Codes MUST be set in the same digit length of the Master Code** (For example, if the Master Code is 5 digits, then all User Codes must be in 5 digits as well. All other User Codes not in 5 digits become invalid). When the number of digits reaches, the system will check the User Code automatically. Good for high traffic access control.

2 --- Manual Entry Mode – (Default)

Manual Entry Mode always requires the # key following the User Code for code checking. The User Codes can be **4-8 digits arbitrary** and they are **NOT** required to be in the same digit length of the Master Code. Manual Entry increases the level of security in code trial by the unauthorized people.

(3) VALIDATION

Press  key once . Two-beeps confirms the entry

	<u>LOCATION</u>		<u>FUNCTION MODES</u>		<u>VALIDATION</u>
(1) LOCATION	71 (1)	→	1 or 0 (2)	→	# (3)
Key in Location	71				

(2) FUNCTION MODES FOR PACIFIER TONES

Pacifier Tone is the Beep Tones from the keypad, which include the tones of Successful Key entry (1 beep) and the Unsuccessful User Code entry (5 beeps).

NOTE:

The beeps for the Warning and the Power-up Delay do not belong to pacifier tones and can not be OFF.


1 --- Pacifier Tone ON – (Default)

All the Pacifier Tones available from the keypad are enabled. They are the response tones indicating the operation status of the keypad after a User Code is entered.

0 --- Pacifier Tone OFF

All the Pacifier Tones are OFF. Good for place needs for a silent environment.

(3) VALIDATION

Press  key once. Two-beeps confirms the entry

OUTPUT OPERATION ANNOUNCER**(Location 72)**

	<u>LOCATION</u>		<u>FUNCTION MODES</u>		<u>VALIDATION</u>
(1) LOCATION Key in Location 72	72 (1)	→	1 or 0 (2)	→	# (3)

(2) FUNCTION MODES FOR OUTPUT ANNOUNCER

Output announcer gives notification beep on the operation status of the outputs. There are two notification modes available for the selection. The notification is also OFF while the Pacifier Tone OFF mode in the Location 71 is selected.

NOTE:

In multi-station operation, the output announcer only goes to the keypad that has been operated but not all the keypads in the system.

0 --- No Notification

The output operation notification is OFF but does not affect the normal pacifier tones.

1 --- 1 Second Long Notification -- (Default)

1 second notification beep is given when the output relay activates. It is prepared to notify the person outside the door when the lock is released and the door can be opened. It is good for door lock that gives no sound when it activates, such as a magnetic lock.

2 --- 2 Short Beeps Notification

2 short beeps notification is given when the output relay activates.

(3) VALIDATION

Press **#** key once . Two-beeps confirms the entry

STATUS LED FLASHING ON-OFF DURING STANDBY**(Location 73)**

	<u>LOCATION</u>		<u>FUNCTION MODES</u>		<u>VALIDATION</u>
(1) LOCATION Key in Location 73	73 (1)	→	1 or 0 (2)	→	# (3)

(2) FUNCTION MODES FOR STANDBY FLASHING LIGHT

Some people find the flashing light of the status LED (the amber LED) is annoying during standby, especially at the night time. The standby flashing can be ON-OFF with the setting here.

1 --- Standby Flashing ON -- (Default)

The Status LED gives Standby Flashing all the time. It also gives the light indications showing the operation status of the system.

0 --- Standby Flashing OFF

The Standby Flashing is OFF but it does not affect the system status indications.

(3) VALIDATION

Press **#** key once . Two-beeps confirms the entry

	<u>LOCATION</u>		<u>FUNCTION MODES</u>		<u>VALIDATION</u>
	80 (1)	→	0 or 1 – 999 (2)	→	# (3)

(1) LOCATION

Key in Location 80

(2) FUNCTION MODES FOR DOOR FORCED OPEN WARNING

The Door Forced Open Warning function works with a Door Position Sensing switch equipped on the door (usually a magnetic contact). Once a Timing Figure is put into the Function Mode box, the warning mode is enabled.

0 --- Door Forced Open Warning OFF – (Default)

1 - 999 --- Door Forced Open Warning & Timing

The Timing Figure for the Warning can be 1-999 seconds. The keypad generates the door forced open warning beeps instantly if the door is forced to open without a valid User Code or pressing of Egress Button. The beeps will last as long as the time set on the timer and it can be stopped at anytime with an User Code in Group 1 before the end of the time.

The Manner of The Door Forced Open Warning:

- a) The door is forced to open (without using Code or Egress Button) – **Warning**
- b) The door is opened with Code – **No Warning**
- c) The door is opened with Egress Button – **No Warning**

(3) VALIDATION

Press key once . Two-beeps confirms the entry

	<u>LOCATION</u>		<u>FUNCTION MODES</u>		<u>VALIDATION</u>
	81 (1)	→	0 or 1 – 999 (2)	→	# (3)

(1) LOCATION

Key in Location 81

(2) FUNCTION MODES FOR DOOR PROPPED-UP WARNING

If somebody opened the door and left it open longer than the allowable delay time, the keypad will generate door propped-up warning **until the door is re-closed**. There is warning beeps from the keypad only but it does not activate the alarm output. This function works with a door position sensing switch equipped on the door.

0 --- Door Propped-up Warning OFF – (Default)

1 - 999 --- Door Propped-up Warning ON & The Delay Time

The Delay Time can be 1 to 999 seconds. It is the allowed time for door open without starting warning.

(3) VALIDATION

Press key once . Two-beeps confirms the entry

INTELLIGENT EGRESS BUTTON – AN UNIQUE FEATURE OF THE KEYPAD

INTRODUCTION

Most of the keypads for access control are just for controlling “Going In” from outside. It is not enough for today’s access control systems. In fact, controlling “Going Out” is also very important in some public passage areas those are not allowed to use locks or digital keypads for stopping of “Going Out” due to safety reasons. Such as hospitals, kindergartens, elderly homes, convenient stores, emergency exits etc.. The wardens, teachers, shopkeepers and the guards are always required to keep an eye on people to prevent unattended leaving, shoplifting, and unauthorized use of the emergency exits.

The Intelligent Egress Button can be programmed to do something to get attention from the person on duty before the door is opened. The button offers programmable egress delay, delay with warning, holding button for the delay, momentary button contact with warning for the delay and even gives alarm when a controlled door is opened.

Locations 90 is the place for setting the desired functions for the Egress Button.

The functions programmed to the Egress Button do not affect the normal operation of the keypad. The operation of the keypad with Code is always in the first priority to give instant action to the output relay 1 for door strike.

It is **NOT** required to program the Egress Button with the special function in normal use. Just leave it on its default values.

WHERE AND WHY “GOING OUT” NEEDS ATTENTION

Examples for some areas may need an Intelligent Egress Button:

Hospital:

Some of the patients are not allowed to leave the ward without doctor’s permission. An egress button with exit delay and warning beeps will help the nurse or warden to get attention to the door when the egress button is pressed. Further setting of the egress button with holding contact delay even gives higher level of security to a controlled door.

Kindergarten:

Young children are always active. Some of them may be willing to go out to explore their ways of playing. For safety reason, teachers have to watch all of them in the attended area. Leaving school alone without the companion of parents or teacher is dangerous to young children. An egress button with delay and warning beeps will be helpful to prevent the children trying to go out without getting the attention of the teacher.

Elderly Home:

The elderly needs constant attention and care. Some old people have poor memory. They may forget the way to come back if they leave home alone. An egress button with delay and warning beep will easily get the attention of the warden before the door is open.

Convenient Store:

Most of the convenient stores have just only one or two shopkeepers on duty. They are usually the cashier. Shoplifting may easily happen while the shopkeeper is busily serving customers at the cashier desk. A holding contact egress button with delay and warning beeps may help to stop most of the shoplifting. As the thief knows that he is gotten attention by the shopkeeper before the door is open.

High Traffic Passage:

A short buffer time may be necessary for opening a door outward after pressing the egress button for those exits open to a high traffic passage. An egress button with short delay and warning beeps helps the user to pay attention to the people passing by to prevent hitting them when the door is pushed outward.

Emergency Exit:

Emergency Exit is not open to the public for daily use. It is for emergency case only. It is usually closed and watched by guards. The egress button of this keypad can be programmed to offer exit delay with warning beeps and even gives alarm output to trigger an alarm system when the door is forced to open or the door is open after the exit delay expired. It is an useful tool to get attention of the person on duty.

WARNING

Do not enable Egress Delay if instant door open for leaving is the main concern in your area.

Make sure the Egress Delay does not affect the safety in your service area before enabling the function in Location 90.

The default setting of the system is NO DELAY.

<u>LOCATION</u>		<u>CONFIGURATIONS</u>		<u>DELAY TIME</u>		<u>VALIDATION</u>
90 (1)	→	1 – 5 (2)	→	0 or 1 – 99 (3)	→	# (4)

(1) LOCATION

Key in Location 90

(2) CONFIGURATIONS OF THE EGRESS WARNING

Key in the number to enable 1 of the 6 configurations described below:

1 --- Momentary Contact Mode without Warning -- (Default)

- Press the Button once. No warning or alarm is given during Egress Delay.
- Good for silent area. The people have to wait for the door open until the delay time reaches.

2 --- Momentary Contact Mode with Warning Beep

- Press the Button once. The system gives Warning Beeps during the Egress Delay.
- Good for the place required attention. The keypad beeps during the people are waiting for the door open.

4 --- Holding Contact Mode without Warning

- Press and hold the Button. No warning or alarm is given during the Egress Delay.
- Good for the silent area. The people require to press & hold the button until the delay time reaches for the door open.

5 --- Holding Contact Mode with Warning Beep

- Press and hold the Button. The system gives Warning Beeps during Egress Delay.
- Good for the place required attention. The keypad beeps while the button is kept pressed during the people are waiting for the door open.

(3) EGRESS DELAY TIMER**0 --- No Delay – (Default)**

Output 1 activates instantly (the door is released instantly) when the Egress Button is pressed.

1 – 99 --- Egress Delay Timing

Put a number of 1 to 99 into the box to enable the Egress Delay. The number is the time in second, which starts to count when the Egress Button is pressed. Output 1 activates (the door is released) when the delay time reaches.

NOTE:

- 1) **Momentary Contact** -- The Egress Delay starts to count when the egress button is momentarily pressed. Output 1 activates automatically (door is released) when the delay time reaches.
- 2) **Holding Contact** -- The user **MUST** hold the egress button in contact for the whole period of the Egress Delay time until Output 1 activates. If the egress button is released before the end of the Egress Delay, the timer will stop to count and reset.


For safety, it is necessary to put **a sticker next to the egress button** telling how to open the door if "Holding Contact" is enabled.

Example: A sticker for an egress button that is programmed with "Holding Contact" of 5 seconds.

Press & Hold The Button
5 Seconds Minimum
Until The Door Is Open





- 3) The Egress Delay does not affect the operation of the User Codes for Output 1. The User Codes always give **INSTANT** action.

(4) VALIDATION

Press  key once . Two-beeps confirms the entry

EXAMPLES:

Example 1: Set Egress Button in Momentary contact of 5 seconds with delay & warning beep

   
(a) (b) (c) (d)





(a) Egress function programming, (b) Momentary contact with warning, (c) Delay time of 5 seconds to release door, (d) Entry confirmation

Example 2: Set Egress Button in Holding contact of 10 seconds with warning beep

   
(a) (b) (c) (d)


(a) Egress function programming, (b) Holding contact mode with warning, (c) Holding time of 10 seconds to release door, (d) Entry confirmation

Example 3: Set Egress Button in Momentary contact without delay (This is the default setting)

   
(a) (b) (c) (d)

(a) Egress function programming, (b) Momentary contact without delay, (c) Release door instantly, (d) Entry confirmation

The keypad is programmable for keypad mode to work stand-alone for door control directly or for server mode to work with a split-decoder for high security access control.

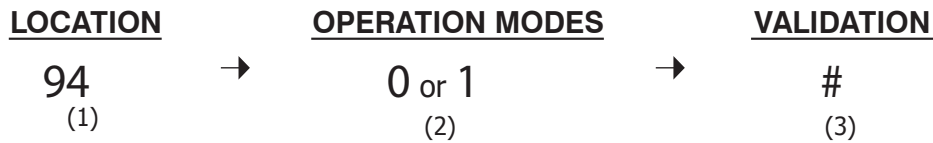

(1) LOCATION

Key in Location 94

(2) OPERATION MODES

0 – Keypad Mode (Default)

Keypad Mode sets the keypad for stand-alone operation to provide its available functions. It is compatible with the auxiliary readers/keypads for multi-station expansion.

1 – Server Mode

Server Mode sets the keypad to compatible with both the decoder for split-decoded operation and the auxiliary readers/keypads for multi-station expansion. A split decoded keypad system uses the keypad(s) for human interface outside and the internal decoder for door lock control to prevent sabotage.

(3) VALIDATION

Press **#** key once. Two-beep confirms the entry

CLOSE PROGRAMMING MODE

(* *)

Always close programming mode with * * to set system back to normal Operation after programming.

VALIDATION

***** ***** ----- System is back to normal operation mode


PROGRAMMING MAKE SIMPLE – For General Users

This is a multi purpose keypad. It has many functions for user's selection. For those general users taking the keypad for door strike only, most of the features can be kept in their Default values. Only the User Codes / Cards and a private Master Code are required to program.

The keypad accepts **1) Card only, 2) Code only, 3) Card + Code or 4) Card + Common User Code** to operate its outputs.

PROGRAMMING

NOTE:

- a) The  button is equivalent to the * button in the keypad with bell button.
- b) Wait 1 minute until the end of power up delay, or keyin **12#** to stop the power-up delay instantly and set the keypad to normal operation.

1) Set System in Programming Mode with The Factory Set Master Code 0 0 0 0

0000 ** ---- 2 beeps, system is in Programming Mode

Note: If the Master Code is forgotten, use the DAP Code to set the system into programming mode.
See **DAP CODE 2828** in **page 15** for the details.

2) Change The Factory Set Master Code to Owner's Private Master Code for Security Reason

01 3289 # ---- 2 beeps, 3 2 8 9 is a Master Code for example here only.
It replaces the old master code 0000.

3) Record an "EM Card" to Operate The Output 1 for Door Open

10 1 001 READ CARD #
(a) (b) (c) (d) (e)

- (a) 10 = Programming Location for Output 1
- (b) 1 = Programming option for EM Card only
- (c) 001 = One of the 1,000 User IDs for the User Code/Card from 000-999
- (d) Read Card = Put the Card close to the card reader
- (e) # = Confirm the card is read, 2 beeps

4) Set a "User Code" to Operate The Output 1 for Door Open

10 2 002 8321 #
(a) (b) (c) (d) (e)

- (a) 10 = Programming Location for Output 1
- (b) 2 = Programming option for User Code only
- (c) 002 = One of the 1,000 User IDs for the User Code/Card from 000-999
- (d) 8321 = The User Code for door open. It is for example here only
- (e) # = Confirm the User Code, 2 beeps

5) Record an “EM Card + User Code” to Operate The Output 1 for Door Open

10 3 003 READ CARD 6123 #
(a) (b) (c) (d) (e) (f)

(a) 10 = Programming Location for Output 1

(b) 3 = Programming option for EM Card + User Code. (The User Code can be repeated use or proprietary)

(c) 003 = One of the 1,000 User IDs for the User Code/Card from 000-999

(d) Read Card = Put the Card close to the card reader

(e) 6123 = The User Code to be used with the EM Card. It is for example here only.

(f) # = Confirm the Card+Code is stored, 2 beeps

6) Record an “EM Card + Common User Code” to Operate The Output 1 for Door Open

10 4 004 READ CARD #
(a) (b) (c) (d) (e)

(a) 10 = Programming Location for Output 1

(b) 4 = Programming option for EM Card + Common User Code

(c) 004 = One of the 1,000 User IDs for the User Code/Card from 000-999

(d) Read Card = Put the Card close to the card reader

(e) # = Confirm the card is read, 2 beeps, the Common User Code goes to this User ID automatically

(f) A Common User Code (for example: 1 3 5 7) **MUST** be set at the Programming **Location 03 first**. Common code can be used for all the EM Cards in this operation mode.

REMARK:

If more User Codes and Cards are required for Output 1, repeat the procedures (3) , (4) , (5) or (6) above with other User IDs, such as 005, 006, 007 --- 999 etc. Total 1,000 users are allowed. See Programming Location 10 for the details.

7) Close The Programming Mode

* * ---- 2 beeps

The programming mode is closed. The keypad is back to normal operation mode

OPERATION

1) Open The Door with EM Card

READ CARD --- 2 beeps, the door is open

2) Open The Door with User Code

8 3 2 1 # --- 2 beeps, the door is open

3) Open The Door with EM CARD + User Code

READ CARD 6 1 2 3 # --- 2 beeps, the door is open

4) Open The Door with EM CARD + Common User Code

READ CARD 1 3 5 7 # --- 2 beeps, the door is open

PROGRAMMING SUMMARY CHART


LOCATION	FUNCTION	ENTRY LIMITS & CODE OPTIONS	CODE ENTRY	FACTORY DEFAULT
0 1	Master Code	4-8 Digits	01 MASTER CODE #	NIL
0 2	Super User Code	4-8 Digits	02 SUPER USER CODE #	NIL
0 3	Common User Code for O/P 1	4-8 Digits	03 COMMON USER CODE 1 #	NIL
0 4	Common User Code for O/P 2		04 COMMON USER CODE 2 #	NIL
10	User Codes / Cards for O/P 1	CODE 1 – MEDIA: 1---EM Card 2---Private User Code 3---EM Card+Sec User Code 4---EM Card+Com User Code 5---Deletion of User Code	10 CODE1 CODE2 CODE3 #	NIL
20	User Codes / Cards for O/P 2	CODE 2 – USER ID: 000-999---Group 1(10) 001-100---Group 2(20) CODE 3 – USER CODES/ CARDS : 4-8 Digits/Cards	20 CODE1 CODE2 CODE3 #	NIL
4 0	Visitor Codes	CODE 1 – VISITOR ID: 01-50 CODE 2 – VALID PERIOD: 00---One Time 01-99 Hours CODE 3 – VISITOR CODE: 4-8 Digits	40 CODE1 CODE2 CODE3 #	NIL
4 1	Duress Code for O/P 1	CODE ID – O/P 1: 01-50 CODE ID – O/P 2: 01-10	41 CODE ID DURESS CODE #	NIL
4 2	Duress Code for O/P 2	DURESS CODE: 4-8 Digits	42 CODE ID DURESS CODE #	NIL
5 1	O/P Mode for O/P 1	OUTPUT MODE & TIME: 0--- Start / Stop 1---99999 Seconds	51 O/P MODE & TIME #	5 Seconds
5 2	O/P Mode for O/P 2		52 O/P MODE & TIME #	5 Seconds
5 5	Real-Time-Clock	CURRENT REAL TIME: 00:00-23:59	55 CURRENT TIME #	NIL
5 6	Start & Stop Times for Inhibition	START TIME: 00:00-23:59 STOP TIME: 00:00-23:59	56 START TIME STOP TIME #	NIL
6 0	Personal Safety & Lock-Up	LOCK-UP CODE: 1---10 Trial, Lock-Up 60 Sec. 2---10 Trial, Activates Duress 5-10---5-10 Trial, Lock-Up 15 Minutes 00---No Lock-Up	60 LOCK-UP CODE #	Code = 1, 10 Trials, Lock-Up 60 Seconds
7 0	Code Entry Mode	ENTRY MODE: 1---Auto Mode 2---Manual Mode	70 ENTRY MODE #	Mode = 2, Manual Mode

7 1	Pacifier Tone ON-OFF	FUNCTION MODE: 0---OFF 1---ON	71 <input type="text" value="FUNCTION MODE"/> #	Mode = 1, Pacifier Tone ON
7 2	Output Announcer	FUNCTION MODE: 0---NO Notification 1---1 Second Long Beep 2---2 Short Beeps	72 <input type="text" value="FUNCTION MODE"/> #	Mode = 1 1 Second Long Beep
7 3	Standby LED Flashing	FUNCTION MODE: 0---OFF 1---ON	73 <input type="text" value="FUNCTION MODE"/> #	Mode = 1, Flashing ON
8 0	Door Forced Open Warning & Time	FUNCTION MODE / TIME: 0---OFF 1-999 Seconds	80 <input type="text" value="FUNCTION / TIME"/> #	Mode = 0, Door Forced Open Warning OFF
8 1	Propped-up Warning & Time		81 <input type="text" value="FUNCTION / TIME"/> #	Mode = 0, Propped-up Warning OFF
9 0	Egress Delay Warning	CODE 1 – FUNCTION MODE: 1---Momentary, No warning 2---Momentary, with warning 4---Hold Contact, No warning 5---Hold Contact, with warning CODE 2 – DELAY TIME: 0---No Delay 1-99 Seconds	90 <input type="text" value="CODE 1"/> <input type="text" value="CODE 2"/> #	Mode = 1 Momentary, No warning TIME = 0 No Delay
9 4	Operation Mode	FUNCTION MODE: 0---Keypad Mode 1---Server Mode	94 <input type="text" value="MODE"/> #	Mode = 0 Keypad Mode

SYSTEM CODES	FUNCTION	CODE ENTRY	RESULTS
0 0 0 0	Factory Set Master Code for User to set system in programming Mode at the first time. THIS IS NOT A PERMANENT SYSTEM CODE & IT IS CHANGED IF A NEW MASTER CODE IS PROGRAMMED.	0000 * * OR <input type="text" value="NEW MASTER CODE"/> * *	System in Programming Mode
9 9 9 9	REFRESH CODE -- Refresh the system and set all its function back to default values.	9999 #	All programmed data are cleared and back to the default values except the Master Code
2 8 2 8	DAP CODE -- Direct access to programming mode. Valid only in the power-up delay period	2828 #	System in Programming Mode
0 9 9 9	USER Codes / Cards whole group clearing Code for the selected Location LOCATIONS: 10--- User Group 1 20--- User Group 2 40--- Vistor Group 41--- Duress Group 1 42--- Duress Group 2	<input type="text" value="LOCATION NO."/> 0999 #	Whole group of users in the selected location are cleared
* *	Exit Programming Code	**	The system back to normal operation after programming


APPLICATION EXAMPLES

1) STAND ALONE DOOR LOCK

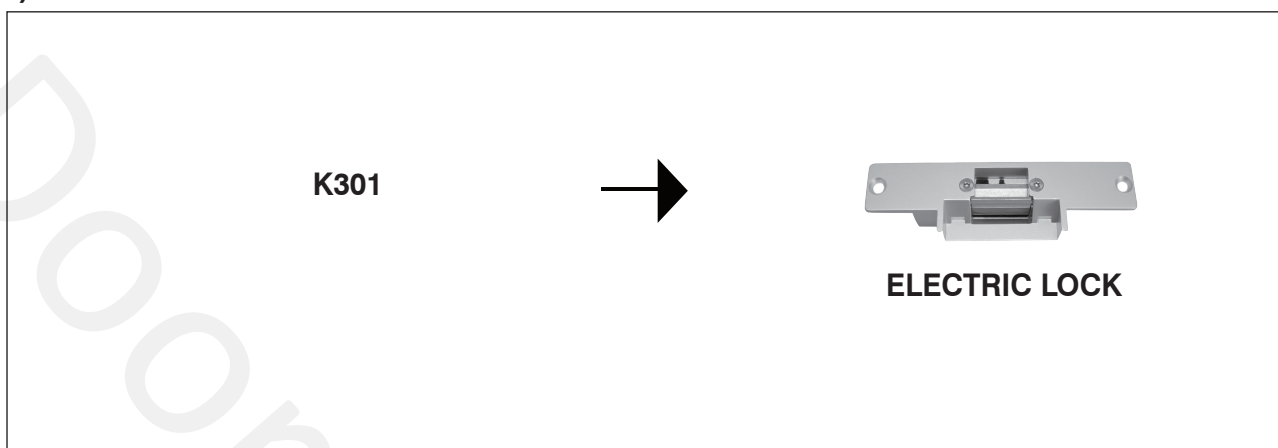


NOTE:

- Connect the 1N4004 as close as possible to the lock in parallel with the lock power terminals of the lock to absorb the back EMF to prevent it from damaging the keypad. The 1N4004 is not required if the electric lock is AC operated.
- To avoid Electro-Static-Discharge from interfering with the operation of the keypad, always ground the (-) terminal of the keypad to earth.
- Always connect **DOOR SENSOR** terminal to (-) ground if not used.

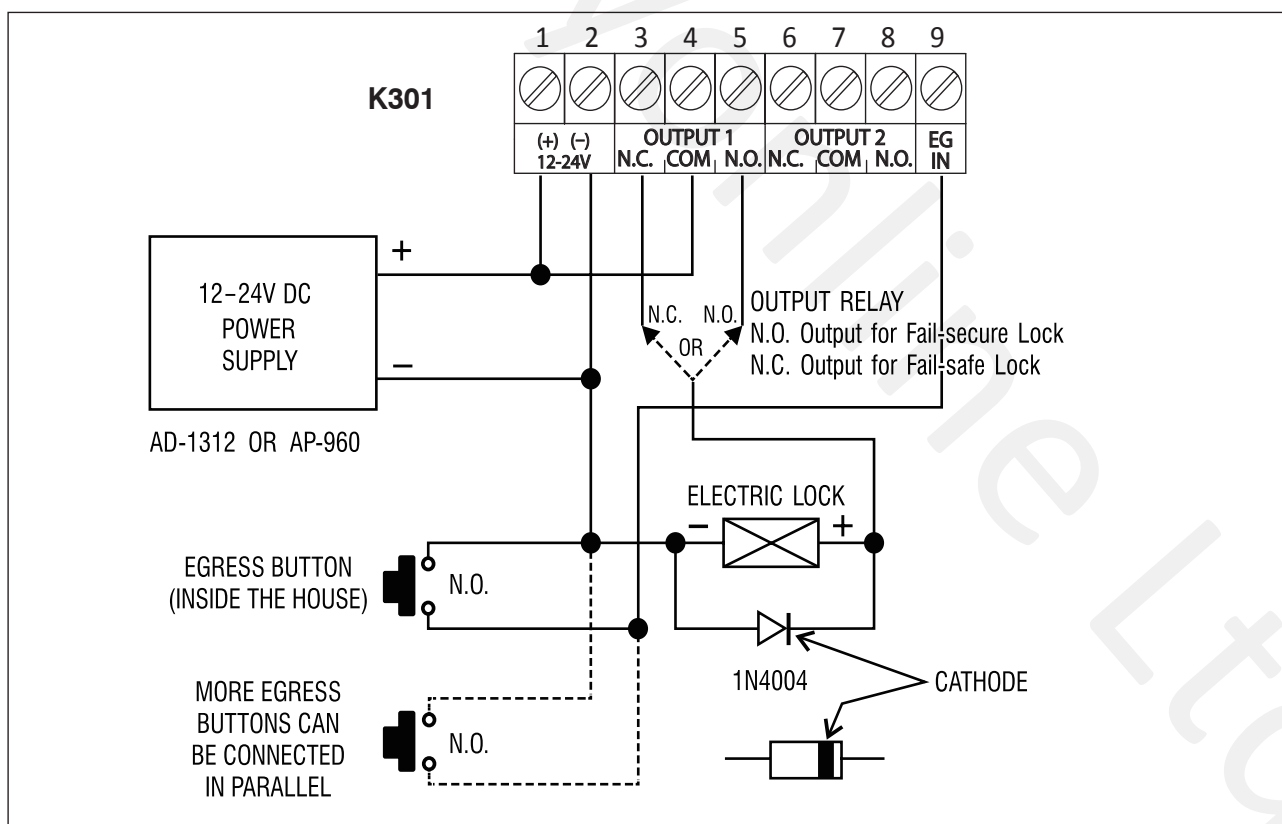


2) INTER-LOCK SYSTEM USING TWO KEYPADS

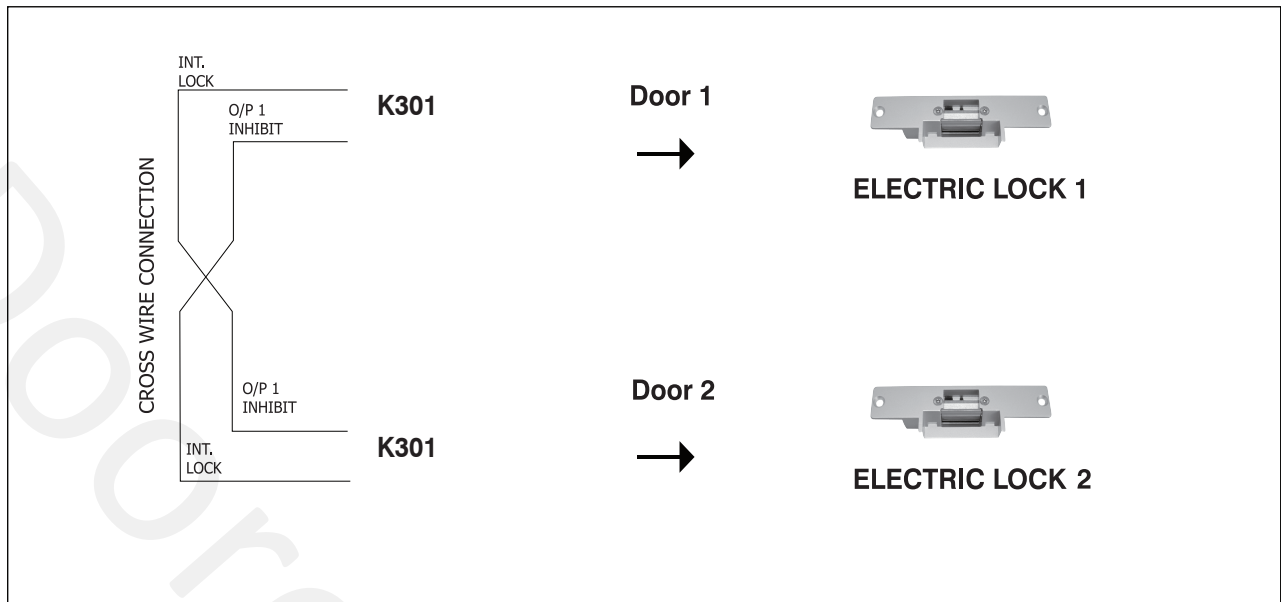


An inter-lock system needs two door controllers. This application example uses two keypads with simple cross wire connection on their "Output 1 Inhibit" and "Inter-lock Control Output" terminals. It is necessary to link up the "(-) GND" terminals of the two keypads as common ground to achieve the inter-lock logical functions.

- Use keypad to open the door from outside
- Press egress button to open the door from inside
- Connect the door magnetic sensors on the doors to monitor their positions
- While door 1 is open, then, door 2 is forced to keep close, or vice versa
- Use N.O. Relay output for fail-secure lock; and N.C. output for fail-safe lock
- Please also see the "NOTE" stated in the Application Example (1)

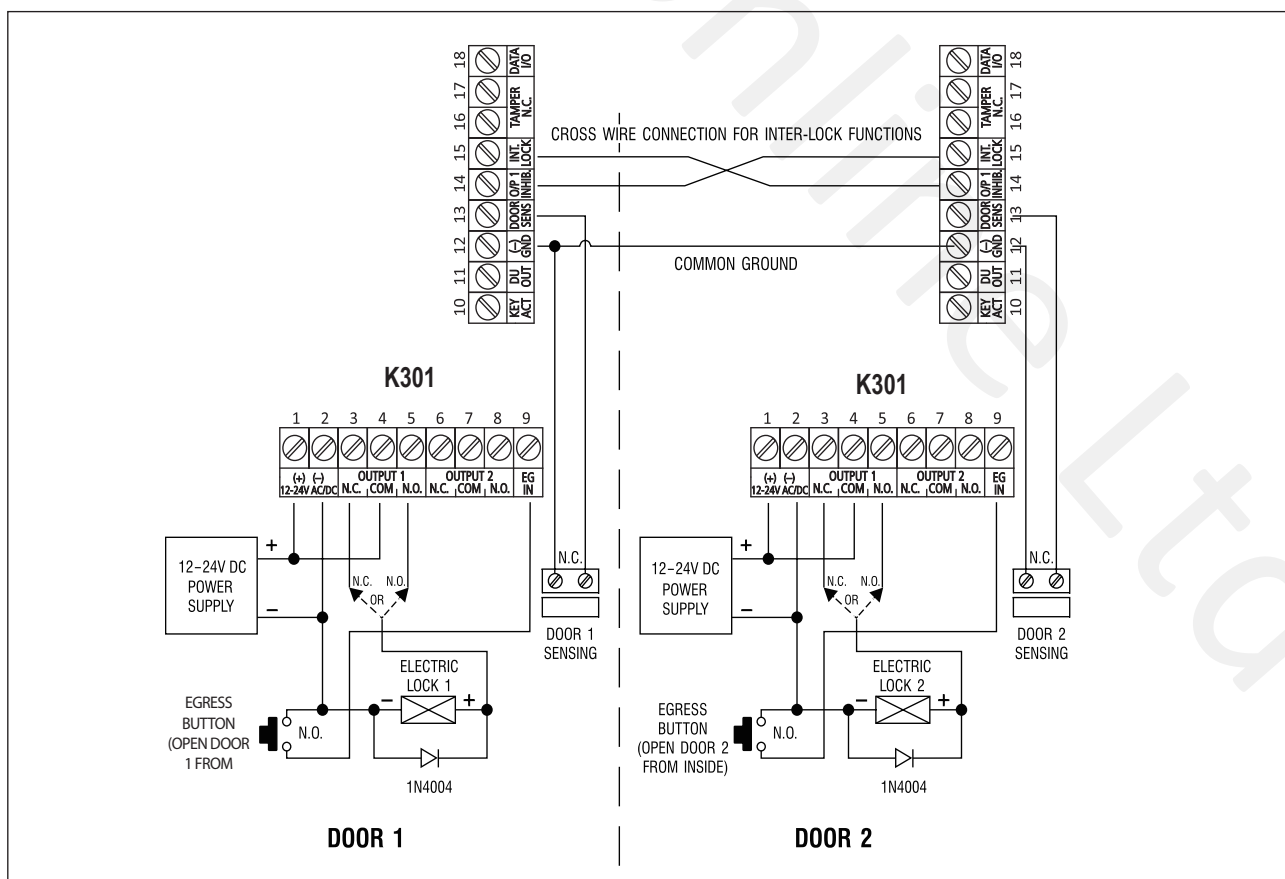


APPLICATION HINTS FOR THE AUXILIARY TERMINALS

(A) TAMPER N.C.

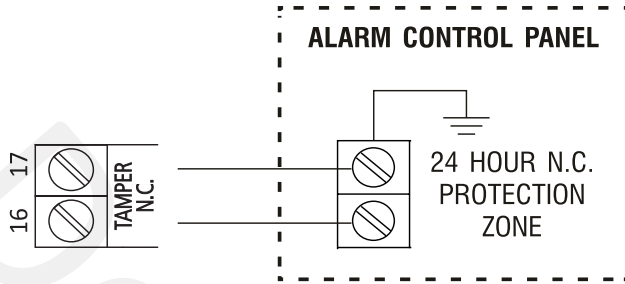

The tamper switch is Normally Closed while the keypad is secured on gang box. It is open when the keypad is removed from the gang box. To prevent sabotage, connect these terminals in series with a 24 hour N.C. protection zone of an alarm system if required.


(B) DOOR SENS

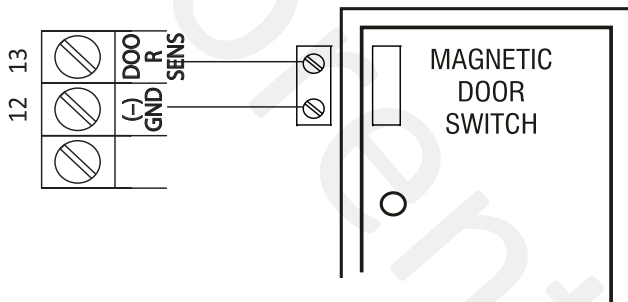


With the help of a Normally Closed door position sensor (usually a magnetic door switch) on the door to set up the following functions:

- a) **Door Auto Relock** -- The system will immediately relock the door after a valid access has been gained to prevent "tailgate" entries.
- b) **Door Forced-open Alarm** -- The keypad will generate alarm instantly if the door is forced to open. Enable the function at Location 80.
- c) **Door Propped-up Alarm** -- The keypad will generate alarm if the door is left open longer than the pre-set delay time. Enable the function at Location 81.
- d) **Inter-lock Control** -- When the door is open, the interlock output of the keypad will give a (-) command to stop the other keypad in an inter-lock system.

(C) KEY ACTIVE

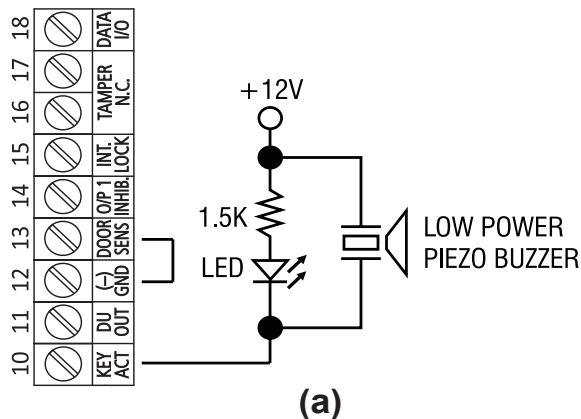

OR

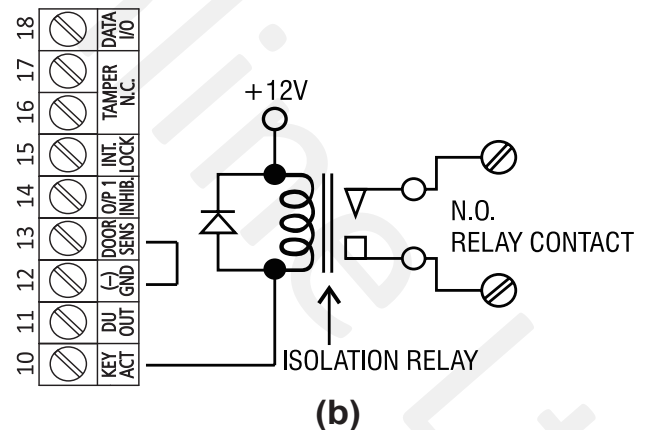


The Key Active Output switches to (-) ground for 10 seconds whenever a key is touched. You may use it to turn ON an LED lamp and /or a small buzzer to notify a guard; or to energize a relay to switch ON lights or trigger an CCTV Camera to start recording.

- Make sure that the relay for switching ON lights has high enough isolation between high voltage and low voltage to prevent damage of the keypad.

- Only one connection option is recommended. Make sure the sink current does not exceed the maximum rating of 100mA.
- External power supply and isolation relay are strictly necessary in driving high power device, such as lights.

(D) DURESS OUTPUT

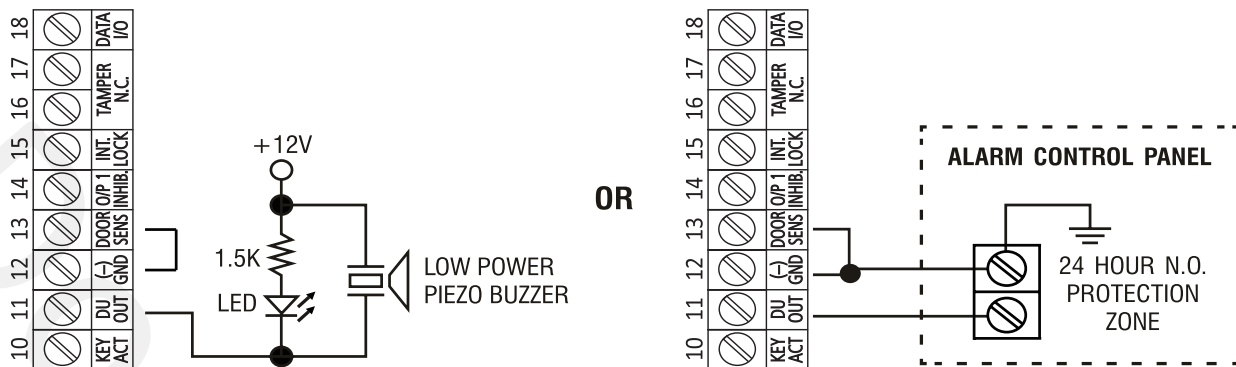


The Duress Output switches to (-) ground when duress code is entered. You may use it to turn ON an LED lamp and/ or a small buzzer to notify a guard; or connect it to a 24 hour Normally Open protection zone of an alarm system.

- Only one connection option is recommended. Make sure that the sink current does not exceed the maximum rating of 100mA.


(E) OUTPUT 2

(i) Shunting an N.C. Zone

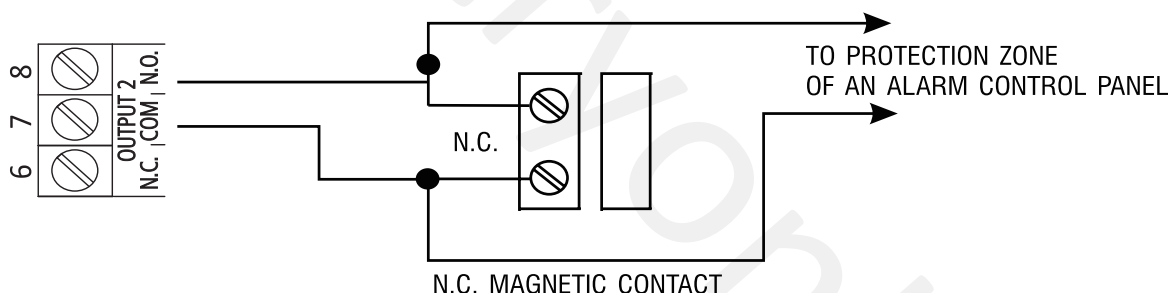

- Use the Normally Open (N.O.) output contact to shunt a Normally Closed (N.C.) protection zone of an alarm system.
- Set output contact to Start / Stop Mode (Programming Option 52, Output Mode=0).

(ii) Alarm System Arm-Disarm Control

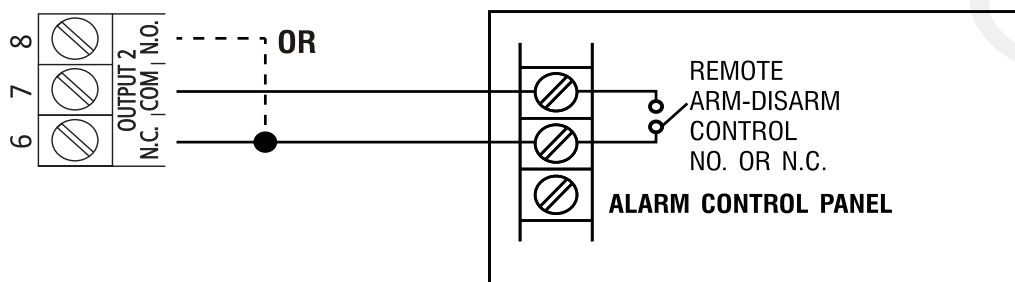

- Use the (N.O.) or (N.C.) output contact to make arm-disarm control of an alarm system.
- Consult your alarm control panel manual for the appropriate output contact for arm-disarm control. Usually set output 2 to Momentary mode (Programming Option 521, Location 52, Output Mode=1) for multi station systems and Start / Stop mode (Programming Option 520, Location 52, Output Mode=0) for single station systems.